



Powder Coating Equipment

sieving Machine

Model RP-800

For Recycling Used Powder Filtered And Mixed With
new powder

- | | |
|-------------------|--------------|
| -Processed Volume | 1.3 kgr/min |
| - Speed | Max 3000 rpm |
| - Mesh | 60 |

Installation & Connection Guide (Shape No.1)

- 1- Sieving Machine Base
- 2- Sieving Mesh (install it on base , the edge must be on top)
- 3- Pnumatic Vibrator Unit (install it on base after sieving mesh)
- 4- Snap Lock (fit and lock base and vibrator unit)
- 5- Pnumatic Hose (connect fitting A to fitting B)
- 6- Sieve Cap (put cap on vibrator unit)

Operation

- 1- Connect Air Supply To Fitting C
- 2- Feed Powder In Sieving Machine
- 3- Open Air Flow Controler On Sieving Machine

NOTE :

It Is Not Neccesary To Put The Cap During Sieving

Model RP-800

